PARTS DRAWING / SCHEMA DES PIÈCES / DIAGRAMA DE PIEZAS - PM0106500.02

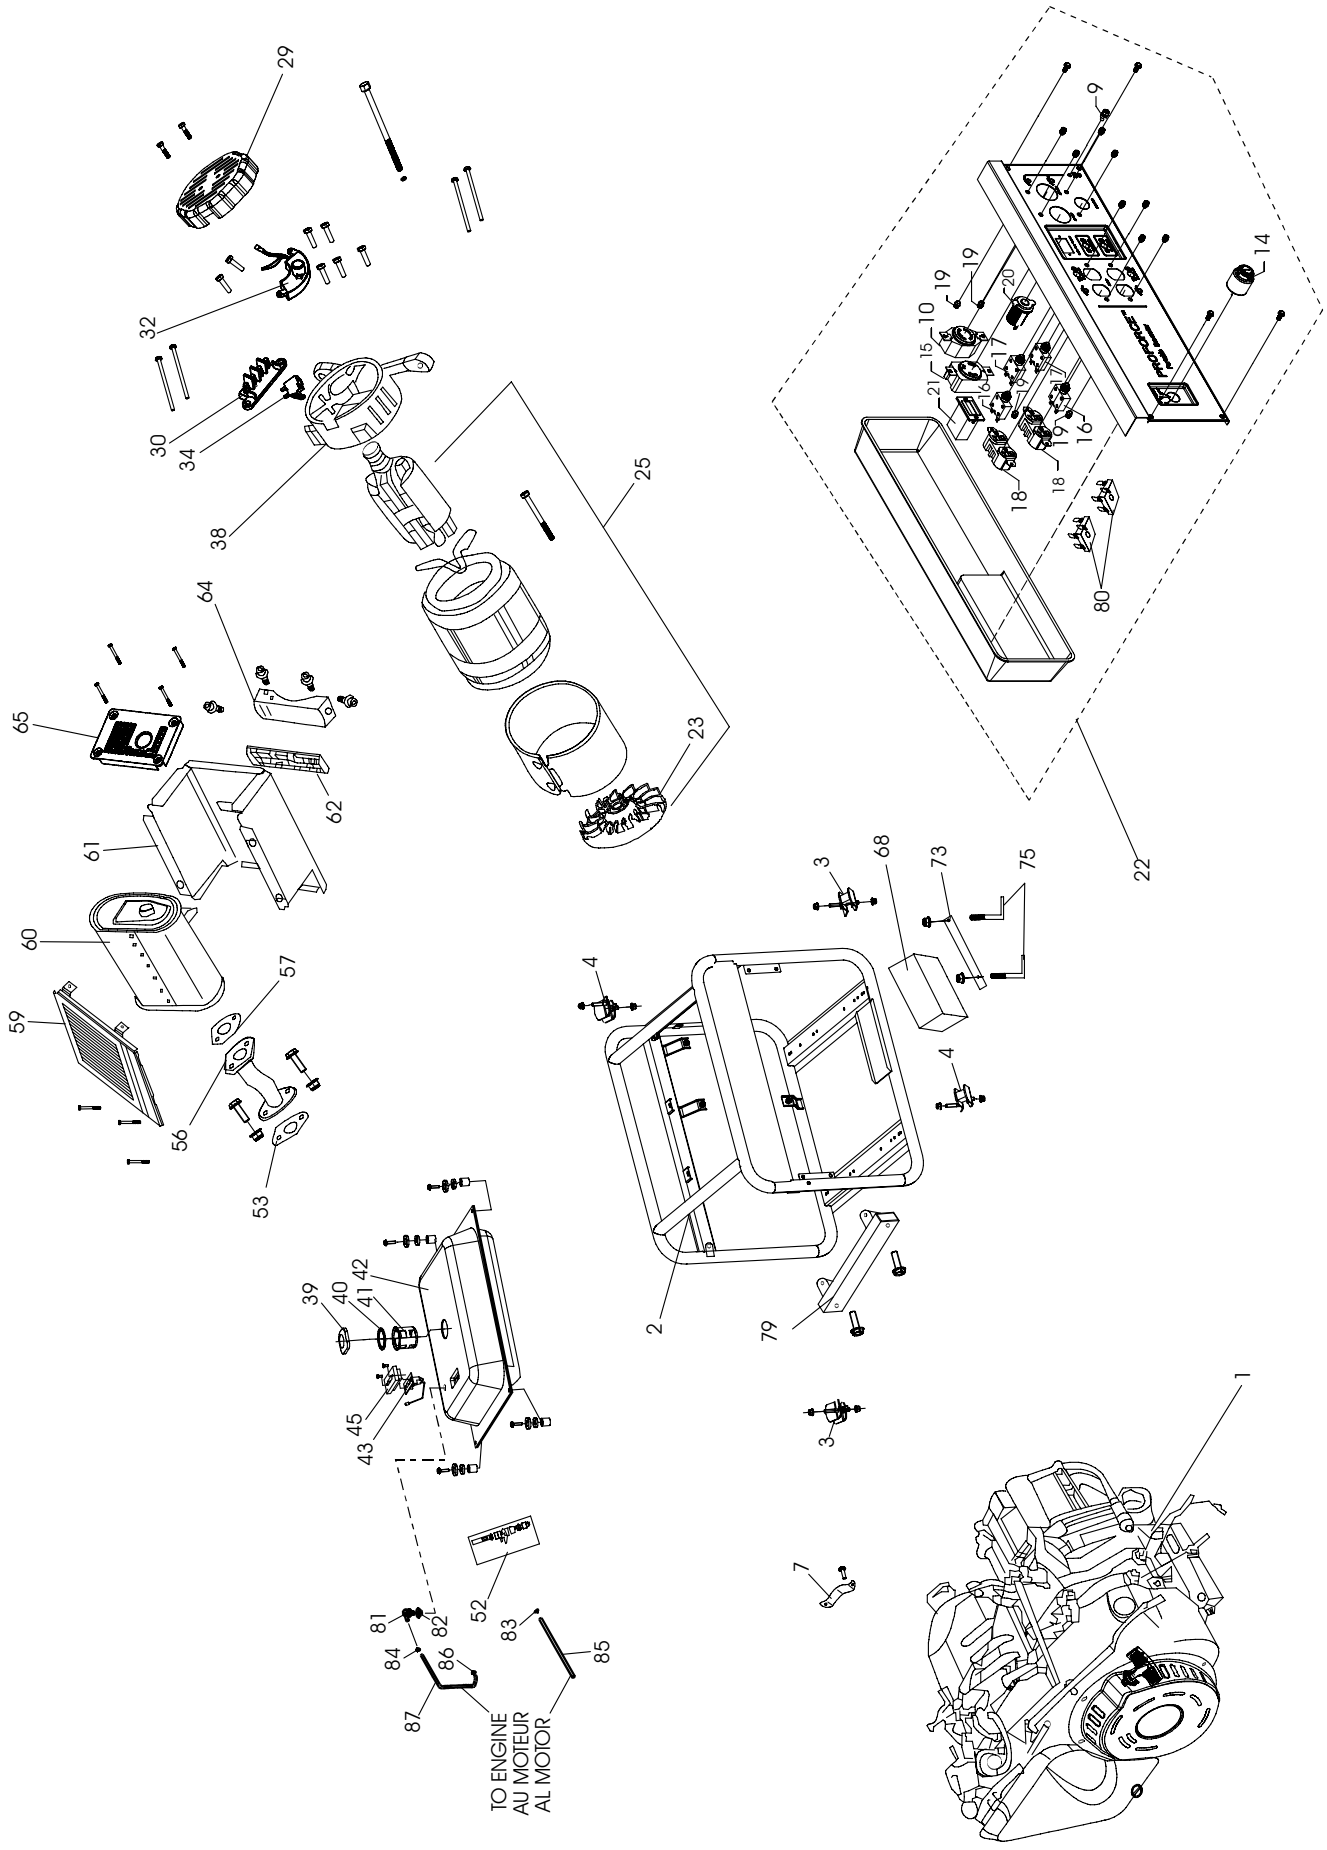

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS - PM0106500.02

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0069005	Engine 420 cc	Moteur 420 cc	Motor 420 cc	1
2	0068609	Frame	Cadre	Marco	1
3	0067300	Isolator left	Sectionneur gauche	Aislador izquierda	2
4	0067301	Isolator right	Sectionneur droite	Aislador derecho	2
7	0067302	Bracket, air cleaner	Support	Soporte	1
9	0067303	Ground terminal	Borne de mise à terre	Terminal, tierra	1
10	0049365	Receptacle L14-30R	Prise L14-30R	Receptáculo L14-30R	1
14	0067304	Ignition switch	Interrupteur	Interruptor	1
15	0032565	Receptacle L5-30R	Prise L5-30R	Receptáculo L5-30R	1
16	0067787	Circuit Breaker 20 amp	Disjoncteurs 20 amp	Cortacircuitos 20 amp	2
17	0067788	Circuit Breaker 30 amp	Disjoncteurs 30 amp	Cortacircuitos 30 amp	2
18	0037762.01	Receptacle 5-20R	Prise 5-20R	Receptáculo 5-20R	2
19	0067305	Power indicator	Alimenter l'indicateur	Enchufe indicador	4
20	0061990	Receptacle DC	Prise CC	Receptáculo CC	1
21	0069276	Hour meter	Horomètre	Contador Horario	1
22	0067307	Panel, wired	Tableau complet câblé	Panel, cabeado completo	1
23	0067308	Fan	Ventilateur	Ventilador	1
25	0068521	Assy, rotor/stator	Ensemble de rotor et stator	Conjunto, rotor y estator	1
29	0067312	Cover, end	Couvercle	Tapa	1
30	0067313	Connection board	Conseil de connexion	Tabla de conexión	1
32	0067314	Voltage regulator	La tension régulatrice	El regulador del voltaje	1
34	0067223	Brush module	Brosser le module	Cepille módulo	1
38	0067316	Stay, generator	Séjour	Permanezca	1
39	0067731	Fuel cap	Capuchon	Tapa de combustible	1
40	0067318	Washer, fuel cap	Rondelle	Arandela	1
41	0067319	Fuel filter	Filtre à carburant	Filtro de combustible	1
42	0069096	Fuel tank	Réservoir de carburant	Tanque de metal de combustible	1
43	0067229	Fuel gauge	Jauge de carburant	Indicador de combustible	1
45	0067230	Gasket, fuel gauge	Joint	Empaquetadura	1
52	0067157	Fuel shut-off	Alimenter d'arrêt	Abastezca de combustible válvula	1
53	0067324	Gasket, exhaust pipe A	Joint A	Empaquetadera A	1
56	0067325	Exhaust pipe	Tuyau d'échappement	Tubo de descarga	1
57	0067326	Gasket, exhaust pipe	Joint	Empaquetadera	1
59	0067327	Guard, muffler	Garant	Protector	1
60	0068610	Muffler	Silencieux	Silenciador	1
61	0067329	Shroud, muffler	Enveloppe	Guardera	1
62	0067330	Rubber seal	Joint	Sello	1
64	0067331	Bracket, metal	Support	Soporte	1
65	0067332	Side, muffler	Côté, silencieux	Lado, silenciador	1
68	0067333	Battery	Batterie	Batería	1
73	0067334	Bracket, battery	Support	Soporte	1
75	0067335	Bolt-L	Boulon-L	Perno-L	2
76	0067336	Crosspiece	Pièce en croix	Cruceta	1
80	0067405	Rectifier	Redresseur	Rectificador	2
81	0068979	Valve, rollover	Soupape	Válvula	1
82	0065127	Bushing, rollover valve	Bague	Buje	1
83	0068982	Clip, spring 8mm	Attache 8mm	Presilla 8mm	1
84	0068983	Clamp, hose 8mm	Crampon, tuyau 8mm	Abrazadera, manguera 8mm	1
85	0067743	Hose, fuel	Flexible	Manguera	1
86	0068978	Clamp, hose 12mm	Crampon, tuyau 12mm	Abrazadera, manguera 12mm	3
87	0069097	Hose, fuel vapor	Flexible	Manguera	1

WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.

AVERTISSEMENT: Pour éviter toute blessure personnelle ou dommage à l'équipement, l'installation et tout entretien devralent être effectués par un électricien qualifié ou un préposé au service autorisé. En aucun cas, une personne non-qualifiée ne devrait essayer de faire le raccord au circuit principal.

ADVERTENCIA: Para evitar posibles lesiones físcas o daños materiales, es necesario que la instalación y todo el servicio sea realizado por un electricista matriculado o representatnte de servicio autorizado. Bajo ninguna circunstancia debe permitirse que una persona que no está capacitad trate de manipular cables dentro del circuito de servicio eléctrico.

ENGINE DRAWING / SCHEMA DE MOTEUR / DIAGRAMA DE MOTOR

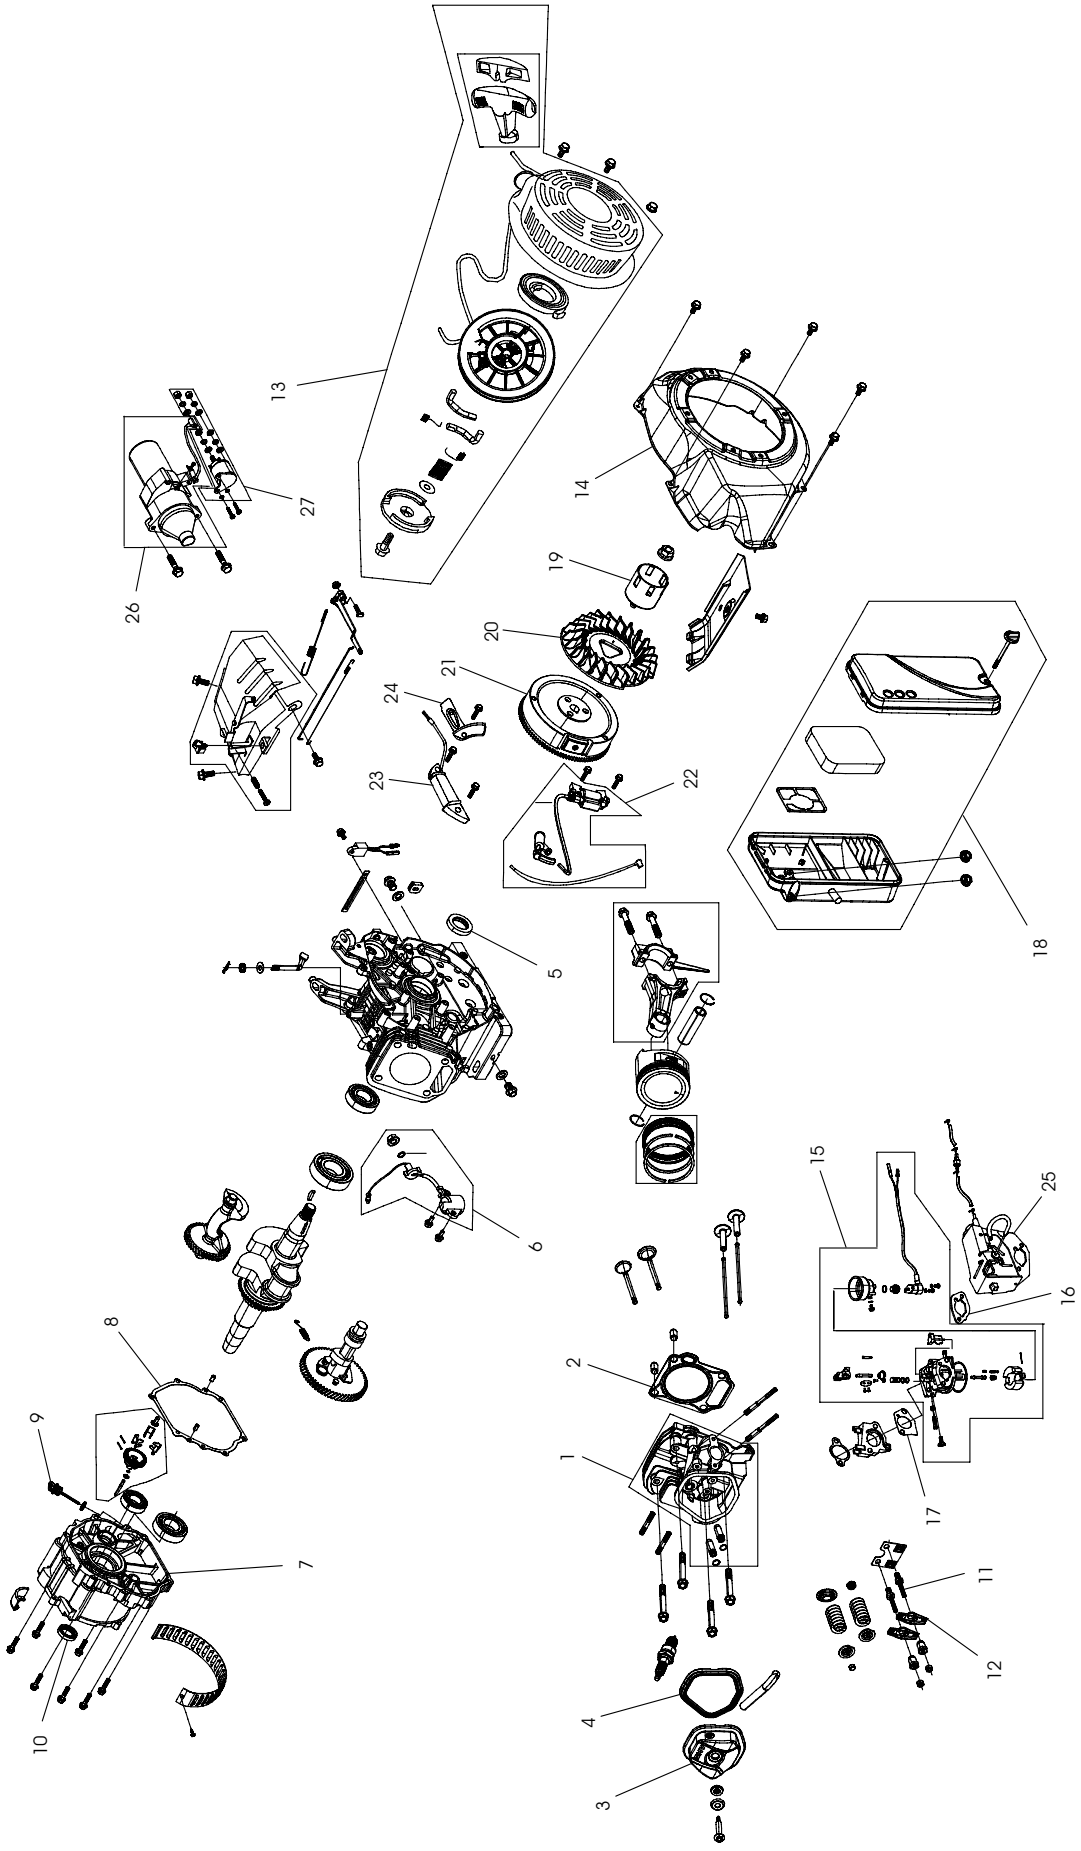

ENGINE PARTS LIST / LISTE DES PIÈCES DU MOTEUR / LISTA DE PIEZAS DEL MOTOR					
REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
	0069005	Engine 420 cc	Moteur 420 cc	Motor 420 cc	1
1	0069075	Cylinder head assembly	Ensemble de tete de cylindre	Conjunto de cabezal de cilindro	1
2	0068113	Gasket, cylinder head	Joint	Empaquetadura	1
3	0069076	Cover, cylinder head	Couvercle	Tapa	1
4	0069077	Gasket, cylinder head cover	Joint	Empaquetadura	1
5	0068094	Oil seal	Joint	Sello	1
6	0068117	Sensor, engine oil	Détecteur	Sensor	1
7	0068118	Cover, crankcase	Couvercle	Tapa	1
8	0068119	Gasket, crankcase	Joint	Empaquetadura	1
9	0068098	Oil dipstick	Jauge de niveau d'huile	Varilla de aceite	1
10	0068094	Oil seal	Joint	Sello	1
11	0068122	Bolt, valve adjusting	Boulon	Perno	2
12	0068123	Rocker valve	Soupape	Válvula	2
13	0068124	Engine recoil assembly	Moteur recule l'assemblée	Asamblea de retráctil de motor	1
14	0068125	Shroud	Enveloppe	Guardera	1
15	0069078	Carburetor	Carburateur	Carburador	1
16	0068105	Gasket, air cleaner	Joint	Empaquetadura	1
17	0068106	Gasket, carburetor	Joint	Empaquetadura	1
18	0069001	Air cleaner	Aérer le nettoyeur	Limpiador aéreo	1
19	0068130	Pulley, starter	Poulie de démarreur	Polea de arrancador	1
20	0069079	Fan, flywheel	Ventilateur	Ventilador	1
21	0068132	Flywheel	Volant-moteur	Volante	1
22	0068133	Coil, ignition	Bobine d'allumage	Bobina de encendido	1
23	0068514	Coil, charge	Bobine	Bobina	1
24	0068515	Clamp, charge coil	Collier	Abrazadera	1
25	0068516	Control assembly, choke	L'assemblée de contrôle de buse	Conjunto de control de ahogador	1
26	0068134	Motor, starter	Moteur de démarreur	Motor de arranque	1
27	0068517	Relay, starter	Relais de démarreur	Relevador de arranque	1

PORTABILITY KIT INSTALLATION

PORTABILITY KIT PART NUMBER: 0067337

TOOLS REQUIRED: 8mm and 10mm sockets and ratchets, block(s) of wood (minimum of 6" tall).

WHEEL INSTALLATION

1. Blocking up the alternator side of the generator, assemble the axle **(item 70)** to the carrier (align with holes in channel) using two M8 bolts. Thread M8 nuts to the bolts to secure the assembly.
2. Slide the wheel **(item 69)** and washers **(item 72)** onto the axle, with the offset side of the wheel hub against the carrier.
3. Secure the wheel to the axle with the M10 nut **(item 5)**.
4. Repeat above instructions for the remaining wheel.

FOOT INSTALLATION

1. Assemble the rubber feet **(item 76)** to the foot bracket **(item 67)** using M10 nuts **(item 5)**.
2. Blocking up the engine side of the generator, place the foot bracket under the carrier channel. Thread M8 bolts through the mounting holes and thread M8 nuts to the bolts to secure the foot bracket to the carrier.

HANDLE INSTALLATION

1. Assemble the handle **(item 66)** to the carrier (align with hole in tubing). Slide M8 x 55 bolt **(item 77)** through handle, carrier, and washers **(item 78)** as shown in diagram and secure with M8 nut **(item 6).** Tighten until handle is securely clamped to the carrier.
2. Repeat above instructions for the remaining handle.